 


|  |    |
|--|----|
| 1. INSTRUCTION FOR SAFE AND PROPER USE .....                   | 4  |
| 2. DISPOSAL INSTRUCTIONS – OUR ENVIRONMENT POLICY .....        | 4  |
| 3. SAFETY PRECAUTION .....                                     | 5  |
| 4. INTENDED USE OF THE APPLIANCE .....                         | 5  |
| 5. KNOW YOUR COOKER .....                                      | 6  |
| 6. BEFORE FIRST USE .....                                      | 6  |
| 7. FRONT CONTROL PANEL .....                                   | 7  |
| 8. USE OF THE HOB .....  | 9  |
| 8.1 Cooking zone .....   | 9  |
| 9. USE OF THE OVEN .....                                       | 10 |
| 9.1 Warnings and general advice .....                          | 10 |
| 9.2 Cooling system .....                                       | 10 |
| 9.3 Use of the electric grill .....                            | 10 |
| 9.4 How to use the grill .....                                 | 11 |
| 9.5 Warning .....  | 11 |
| 9.6 Storage compartment .....                                  | 11 |
| 10. ELECTRONIC PROGRAMMER .....                                | 12 |
| 10.1 Clock adjustment .....                                    | 12 |
| 10.2 Semiautomatic cooking .....                               | 12 |
| 10.3 Automatic cooking .....                                   | 12 |
| 10.4 End of cooking .....                                      | 12 |
| 10.5 Minute Counter .....                                      | 13 |
| 10.6 Adjusting alarm volume .....                              | 13 |
| 10.7 Switching off the alarm .....                             | 13 |
| 10.8 Cancellation of set data .....                            | 13 |
| 10.9 Changing the set data .....                               | 13 |
| 11. CLEANING AND MAINTENANCE .....                             | 14 |
| 11.1 Cleaning stainless steel .....                            | 14 |
| 11.2 Ordinary daily cleaning .....                             | 14 |
| 11.3 Food stains or residues .....                             | 14 |
| 11.4 Cleaning the glazed ceramic hob .....                     | 14 |
| 11.5 Cleaning of oven .....                                    | 15 |
| 11.6 Door glass .....  | 15 |
| 12. EXTRAORDINARY MAINTENANCE .....                            | 16 |
| 12.1 Replacement of light bulb .....                           | 16 |
| 12.2 Removing the door .....                                   | 16 |
| 12.3 Oven door seal .....                                      | 16 |
| 13. INSTALLATION OF THE APPLIANCE .....                        | 17 |
| 13.1 Electrical connection .....                               | 17 |
| 13.2 Wall fixing .....   | 18 |
| 13.3 Mounting the rear top skirtboard (where applicable) ..... | 18 |



**INSTRUCTIONS FOR THE USER:** these provide recommendations for use, a description of the controls and the correct procedures for cleaning and maintaining the appliance



**INSTRUCTIONS FOR THE INSTALLER:** these are intended for the **qualified engineer** who is to install, commission and test the appliance

## 1. INSTRUCTION FOR SAFE AND PROPER USE



THIS MANUAL IS AN INTEGRAL PART OF THE APPLIANCE AND THEREFORE MUST BE KEPT IN ITS ENTIRETY AND IN AN ACCESSIBLE PLACE FOR THE WHOLE WORKING LIFE OF THE COOKER. WE ADVISE READING THIS MANUAL AND ALL THE INSTRUCTIONS THEREIN BEFORE USING THE COOKER. ALSO KEEP THE SERIES OF NOZZLES SUPPLIED. INSTALLATION MUST BE CARRIED OUT BY QUALIFIED PERSONNEL IN ACCORDANCE WITH THE REGULATIONS IN FORCE. THIS APPLIANCE IS INTENDED FOR DOMESTIC USES AND CONFORMS TO CURRENT **REGULATIONS IN FORCE**. THE APPLIANCE HAS BEEN BUILT TO CARRY OUT THE FOLLOWING FUNCTIONS: **COOKING AND HEATING-UP OF FOOD**. ALL OTHER USES ARE CONSIDERED IMPROPER.

THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR IMPROPER USE.

NEVER USE THIS APPLIANCE FOR HEATING ROOMS.



DO NOT LEAVE THE PACKING IN THE HOME ENVIRONMENT. SEPARATE THE VARIOUS WASTE MATERIALS AND TAKE THEM TO THE NEAREST SPECIAL GARBAGE COLLECTION CENTRE.



THIS APPLIANCE IS MARKED ACCORDING TO THE EUROPEAN DIRECTIVE 2002/96/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE).

THIS GUIDELINE IS THE FRAME OF A EUROPEAN-WIDE VALIDITY OF RETURN AND RECYCLING ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.



DO NOT OBSTRUCT VENTILATION OPENINGS AND HEAT DISPERSAL SLITS.



THE I.D. PLATE WITH TECHNICAL DATA, REGISTRATION NUMBER AND BRAND NAME IS VISIBLY POSITIONED ON THE REAR PROTECTIVE COVER OF THE APPLIANCE. A COPY OF THE PLATE IS INCLUDED WITH THE HANDBOOK AND YOU ARE ADVISED TO FIX IT IN THE APPROPRIATE SPACE ON THE INSIDE COVER PAGE.

**THE PLATE MUST NEVER BE REMOVED.**



DO NOT USE METALLIC SPONGES OR SHARP SCRAPERS: THEY WILL DAMAGE THE SURFACE.

USE NORMAL NON-ABRASIVE PRODUCTS FOR STEEL, AND A WOODEN OR PLASTIC TOOL IF NECESSARY.

RINSE THOROUGHLY AND DRY WITH A SOFT CLOTH OR DEERSKIN.

DO NOT ALLOW RESIDUES OF SUGARY FOODS (SUCH AS JAM) TO SET INSIDE THE OVEN. IF LEFT TO SET FOR TOO LONG, THEY MIGHT DAMAGE THE ENAMEL LINING OF THE OVEN.



**The manufacturer declines all responsibility** for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance or by the use of non-original spares.

## 2. DISPOSAL INSTRUCTIONS – OUR ENVIRONMENT POLICY

Our appliances are only packaged using non-pollutant, environment-friendly, recyclable materials. We urge you to cooperate by disposing of the packaging properly. Contact your local dealer or the competent local organisations for the addresses of collection, recycling and disposal facilities.

Never leave all or part of the packaging lying around. Packaging parts, and especially plastic bags, may represent a suffocation hazard for children.

Your old appliance must also be disposed of properly.

**Important** deliver the appliance to your local organisation authorised to collect scrapped appliances. Proper disposal allows the intelligent recovery of valuable materials. Refrigeration appliances contain gases which may damage the environment; it is important to ensure that the refrigeration circuit pipelines are not damaged until the competent service has taken delivery of the appliance.

Before scrapping your appliances it is important to remove doors and leave shelves in position as for use, to ensure that children cannot accidentally become trapped inside during play. Also, cut the power supply lead and remove it and the plug.

## 3. SAFETY PRECAUTION



ELECTRICAL CONNECTION: PLEASE REFER TO INSTALLATION INSTRUCTION FOR THE GAS & ELECTRICAL SAFETY REGULATIONS AND THE VENTILATION REQUIREMENTS.

IN YOUR OWN INTEREST, AND THAT OF SAFETY, IT IS THE LAW THAT ALL GAS APPLIANCES BE INSTALLED AND SERVICE BY COMPETENT PERSONS, WHO WILL COMPLY WITH THE RELEVANT STANDARDS AND REGULATIONS.

CORGI REGISTERED INSTALLERS UNDERTAKE TO WORK TO SATISFACTORY STANDARDS.

DISCONNECTION OF GAS AND ELECTRIC APPLIANCES SHOULD ALWAYS BE CARRIED OUT BY COMPETENT PERSON.



THE PLUG TO BE CONNECTED TO THE POWER CABLE AND THE SOCKET MUST BE THE SAME TYPE AND MUST CONFORM TO CURRENT REGULATIONS.

THE SOCKET MUST BE ACCESSIBLE AFTER THE APPLIANCE HAS BEEN BUILT IN.

**NEVER UNPLUG BY PULLING ON THE CABLE.**



**DO NOT INSTALL THIS APPLIANCE ON A RAISED PLATFORM.**



IT IS COMPULSORY THAT THE APPLIANCE BE GROUNDED ACCORDING TO THE METHODS REQUIRED BY SAFETY RULES.



IMMEDIATELY AFTER INSTALLATION CARRY OUT A BRIEF INSPECTION TEST OF THE APPLIANCE, FOLLOWING THE INSTRUCTIONS BELOW. SHOULD THE APPLIANCE NOT FUNCTION, DISCONNECT IT FROM THE SUPPLY AND CALL THE NEAREST TECHNICAL ASSISTANCE CENTRE.

**NEVER ATTEMPT TO REPAIR THE APPLIANCE.**



**DO NOT PUT PANS WITHOUT PERFECTLY SMOOTH AND FLAT BOTTOMS ON THE HOB GRIDS.**



**ATTENTION:** IN CASE OF A CRACK BEING DETECTED IN THE GLAZED CERAMIC HOB, IMMEDIATELY DISCONNECT FROM MAINS AND CONTACT THE NEAREST SERVICING CENTRE.



NEVER PUT INFLAMMABLE OBJECTS IN THE OVEN: THEY COULD BE ACCIDENTALLY LIGHTED AND CAUSE FIRES.



**DURING USE THE APPLIANCE BECOMES VERY HOT.** TAKE CARE NOT TO TOUCH THE HEATING ELEMENTS INSIDE THE OVEN.



**THE APPLIANCE IS DESIGNED FOR USE BY ADULTS.** DO NOT ALLOW CHILDREN TO GO NEAR OR PLAY WITH IT.

WHEN OPERATING THE GRILL ALL ACCESSIBLE PARTS COULD BECOME VERY HOT: **KEEP OUT OF THE WAY OF CHILDREN.**



WHEN NOT IN USE, MAKE SURE THAT THE CONTROL KNOBS ARE IN THE CORRECT (OFF) POSITION 0.



BEFORE THE APPLIANCE IS PUT INTO OPERATION, ALL THE LABELS AND PROTECTIVE FILMS APPLIED INSIDE OR OUTSIDE MUST BE REMOVED.

## 4. INTENDED USE OF THE APPLIANCE

THE APPLIANCE HAS BEEN BUILT TO CARRY OUT THE FOLLOWING FUNCTIONS: **COOKING AND HEATING-UP OF FOOD.** ALL OTHER USES ARE CONSIDERED IMPROPER.



***The manufacturer declines all responsibility** for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance or by the use of non-original spares.*



## 5. KNOW YOUR COOKER



- 1** FRONT CONTROL PANEL
- 2** OVEN CAVITY
- 3** OVEN FAN
- 4** OVEN LIGHT
- 5** OVEN DOOR
- 6** DOOR HANDLE
- 7** OVEN GUIDE FOR SHELF AND PAN

## 6. BEFORE FIRST USE



Do not leave the packing in the home environment. Separate the various waste materials and take them to the nearest special garbage collection centre.



The inside of the appliance should be cleaned to remove all manufacturing residues. For further information about cleaning, see section "11. CLEANING AND MAINTENANCE"



Using the oven and the grill for the first time, heat them to the maximum temperature (**260 °C**) for as long as it takes to burn off any production oil residues which could give a nasty flavour to the food. After a power cut, the oven display will flash intermittently and show **0:00**. To adjust refer to paragraph "10. ELECTRONIC PROGRAMMER"



## Instructions for the user

GB-IE

### 7. FRONT CONTROL PANEL

All the cooker controls and commands are on the front panel.



OVEN THERMOSTAT KNOB

OVEN FUNCTION KNOB

VARIABLE GRILL



FRONT LEFT-HAND COOKING ZONE



REAR LEFT-HAND COOKING ZONE




REAR RIGHT-HAND COOKING ZONE



FRONT RIGHT-HAND COOKING ZONE



Before using the oven make sure that the symbol  appears on the display. See paragraph "10. ELECTRONIC PROGRAMMER".

#### COOKING HOB CONTROL KNOB



##### Standard heating

 
The circle next to each knob indicates the cooking zone it controls. To heat, turn the knob to the desired position. Adjustment is continuous so that the appliance also operates at any intermediate value. To turn off, return the knob to 0.



##### Double heating

The circle next to each knob indicates the cooking zone it controls. To heat the inner cooking zone, turn the knob to the desired position.

To heat both the inner and outer cooking zones, turn the knob to  / ; and then release. The knob will thus return to MAX. To adjust heating intensity, rotate the knob anticlockwise to the desired position 0. To return to heating of the inner cooking zone only, set the knob back to and then turn to the desired position. To switch off, return knob to 0.

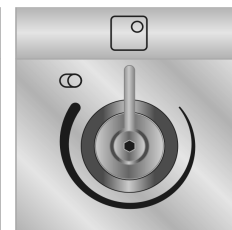


#### MAIN OVEN THERMOSTAT KNOB

Selection of cooking temperature is carried out by turning the knob clockwise to the required temperature, between 50° and 245°C.

The tell-tale light comes on to indicate that the oven is warming up. When it goes out it means that the required temperature has been reached.

Intermittent going on and off of the light means that the oven temperature is being constantly maintained at the programmed level.

 Turn the knob in either direction onto one of the following symbols:

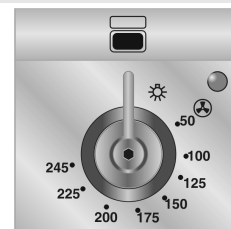

**NO FUNCTION SET**



**OVEN LIGHT**

no element engaged



**VENTILATED HEATING ELEMENT:** the air inside the oven is heated by the element around the fan situated behind the back panel. The fan circulates hot air to maintain an even temperature inside the oven. Select any temperature between 50°C and 245°C. This function is recommended for cooking different types of food (meat, fish, vegetables and cakes) simultaneously on different shelves.

 


### SMALL OVEN THERMOSTAT KNOB

Selection of cooking temperature is carried out by turning the knob clockwise to the required temperature, between 50° and 245°C.

The tell-tale light comes on to indicate that the oven is warming up. When it goes out it means that the required temperature has been reached.

Intermittent going on and off of the light means that the oven temperature is being constantly maintained at the programmed level.

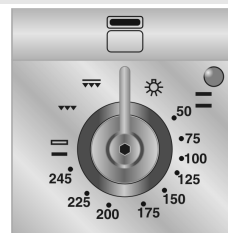

#### NO FUNCTION SET



**LOWER HEATING ELEMENT:** this function is indicated when blind-baking pastry or cooking pizza. It may also be used to finish off quiches or flans to ensure the base pastry is cooked enough.



#### OVEN LIGHT

no element engaged



**GRILL ELEMENT:** for grillin meat, toasting or browning dishes.



**UPPER AND LOWER HEATING ELEMENT:** This way used the upper and the lower elements and is ideal for all type of cooking. It is also suitable for re-heating dishes prepared in advance.



 
**UPPER HEATING ELEMENT + GRILL ELEMENT:** for grillin meat, toasting or for all type of cooking. It is also browning dishes. Recommended for large-sized items.

### SMALL OVEN VARIABLE GRILL KNOB

Position the oven function knob on the symbol or .

Turn the variable grill knob clockwise to the desired position.

This allows to vary heat intensity when cooking with the grill. The knob can be set with continuity between "0" and the stop release position, which corresponds to maximum heat.

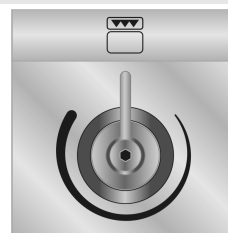


### THERMOSTAT INDICATOR LIGHT (ORANGE)

When this light comes on, the oven is heating up.

When this light goes out, the preset heating temperature has been reached.

 When the light flashes, the temperature inside the oven is steady at the set temperature.

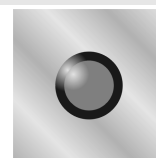


### VARIABLE GRILL INDICATOR LIGHT (RED)

When this light comes on, the oven is heating up.

When this light goes out, the preset heating temperature has been reached.

 When the light flashes, the temperature inside the oven is steady at the set temperature.

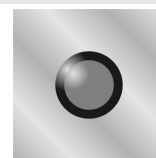
 





### 8. USE OF THE HOB

#### 8.1 Cooking zone

The appliance features 4 cooking zones of different diameter and power. Their position is clearly indicated by circles and the heat given off is defined by the markings on the glass surface. The 5 cooking zones are of the HIGH-LIGHT type and come on after a few seconds of being activated. Heating intensity can be adjusted by means of the knobs located on the front panel from a minimum to a maximum.

 The cooking zones marked by two concentric circles  and by a circle + fish-kettle  feature double heating either within the inner circle or both circles.

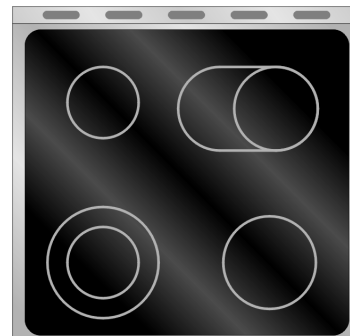


The 4 signal lamps located between the cooking zones come on when the temperature of one or more of the heating zones exceeds 60°C. The lamps go off upon temperature dropping to below approximately 60°C.



When using for the first time, it is advisable to heat up the cooking hob to its maximum temperature for enough time so as to burn off any possible oily manufacturing residues, the smell of which could otherwise be absorbed by the food.

For best results and energy saving, only use receptacles suitable for electric cooking:

 - The bottom of the receptacles must be very thick and perfectly flat; before placing on the cooking hob, make sure that it, as well as the cooking hob itself, are perfectly clean and dry.
- To avoid scratching of the cooking hob, never use cast-iron receptacles or receptacles with a rough bottom.
- To avoid waste of energy, make sure that the diameter of the receptacle bottom is the same as that of the circle marked on the cooking hob.

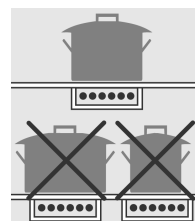

Take care not to spill sugar or sweet mixtures on to the cooking hob when hot. Never place materials or substances which may melt (plastic or aluminium foil) on to the cooking hob. In the event, promptly switch off and remove the molten material with the scraper provided while the top is still warm to prevent it from being damaged. **Failure to instantly clean the** glazed ceramic hob could lead to encrustations which are impossible to remove once the hob has cooled down.



#### **Important.**


*Beware of children in the vicinity as the signal lamps indicating residual heat are out of sight to them. In fact, even after having been turned off, the cooking hob remains hot for a certain period of time.*

**Make sure that children never touch the cooking hob.**



## 9. USE OF THE OVEN




For the models with electronic programmer, before using the oven make sure that the display shows the symbol . To adjust refer to paragraph "10. ELECTRONIC PROGRAMMER "



**During and after use the accessible parts of the oven may be very hot, and children must always be kept at a distance.**

### 9.1 Warnings and general advice

Using the oven and the grill for the first time, heat them to the maximum temperature (260°C) for as long as it takes to burn off any production oil residues which could give a nasty flavour to the food. After a power cut, the oven display will flash intermittently and show . To adjust refer to paragraph "10. ELECTRONIC PROGRAMMER "



 
Oven accessories which may come into contact with foods are made from materials complying with the requirements of the current directive.



During cooking, do not cover the bottom of the oven with aluminium or tin foil and do not place pans or oven trays on it as this may damage the enamel coating. If you wish to use greaseproof paper, place it so that it will not interfere with the hot air circulation inside the oven.

To prevent problems caused by steam in the oven, open the door in two stages: half open (5 cm approx.) for 4-5 seconds and then fully open.

To access food, always leave the door open as short a time as possible to prevent the temperature in the oven from falling and ruining the food.

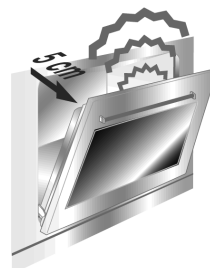


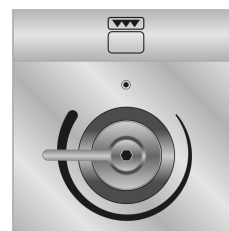 
### 9.2 Cooling system

The oven is equipped with a cooling system which automatically comes on upon a few minutes after the oven has been turned on.

Fans cause a steady outflow of air from above the door which may continue for a brief period of time even after the oven has been turned off.

### 9.3 Use of the electric grill

For short cooking times, for example for browning already-cooked meat, select the static grill function ; set the thermostat knob to maximum temperature (260°C) and adjust grill intensity by means of the variable grill knob. Cooking time must not exceed 30 minutes.







## Instructions for the user

 
GB-IE

### 9.4 How to use the grill



Once the grill is lit, the red warning light will come on. Leave the oven to heat up for five minutes before placing the food inside.

Food should be flavoured and basted with oil or melted butter before cooking. An oven dish should be used to contain the sauces. The food should be placed on the oven shelf which is positioned on one of the guides supplied with the different ovens, following the instructions below:

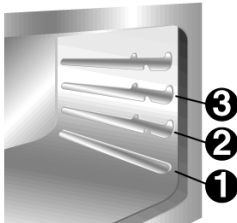

| FOOD                | GRILLE ON THE SHELF |
|---------------------|---------------------|
| Flat or thin meat   | 3                   |
| Rolled roast joints | 2 - 3               |
| Poultry             | 2 - 3               |

### 9.5 Warning



- *Keep the oven door closed during grilling.*
- *The duration of cooking should not last more than 60 minutes.*
- *For models with an electric oven, cooking with the grill and grill + rotisserie must be carried out with the oven door closed.*
- *To avoid hazardous overheating when using the oven or the grill, the appliance's glass lid must always be left open.*
- *During and after use of the grill the accessible parts can be very hot; it is therefore necessary to keep children away from the appliance.*
- *When cooking with the rotisserie, it is advisable to place one of the trays supplied to collect juices and fats that might form on the bottom of the oven, sliding it into the first runner from the bottom.*
- *During cooking, the bottom of the oven should not be covered with aluminium foil and pans or plates should not be rested on it to avoid damaging the layer of enamel. If you wish to use greaseproof paper, position it in such a way that it does not interfere with the circulation of warm air inside the oven.*
- *Whilst the oven is in use, remove all of the unused trays and grills from inside the oven.*

### 9.6 Storage compartment

A storage compartment, accessible by pulling on the top edge of the door, is located beneath the oven.

Never store inflammable materials such as rags, paper or the like. The compartment is intended only for holding the metal accessories of the range.








***The inside of the compartment becomes very hot during operation of the oven: turn off the oven and let it cool down before opening the compartment door.***





## 10. ELECTRONIC PROGRAMMER



### LIST OF FUNCTIONS

-  MINUTE-COUNTER KEY
-  COOKING TIME KEY
-  END OF COOKING KEY
-  DECREASE TIME KEY
-  INCREASE TIME KEY


#### 10.1 Clock adjustment



When using the oven for the first time, or after a power failure, the display flashes regularly and indicates **0:00**. Press the keys  and  and at the same time the keys **-** or **+**: each single press changes the time by 1 minute either up or down.



*Before setting the programmer activate the desired function and temperature.*

 
#### 10.2 Semiautomatic cooking


Use this setting for automatic oven switch-off at the end of cooking time. By pressing key  the display lights up, showing **0:00**; keep the key pressed and at the same time, press keys **-** or **+** to set the cooking time.



Release key  to start the programmed cooking time count. The display will now show the right time together with symbols **A** and .

#### 10.3 Automatic cooking



Use this setting to automatically start and stop the oven.

By pressing key  the display lights up showing **0:00**; keep the key pressed and at the same time, press keys **-** or **+** to set the cooking time.


By pressing key  the sum of the right time + cooking time will appear; keep the key pressed and at the same time, press keys **-** or **+** regulate the end of cooking time.

 Release key  to start the programmed count and the display will show the right time together with symbols **A** and .



*After set-up, to see the cooking time remaining, press the key ; to see the end of cooking time press the key . Set-up with incoherent values is logically prevented (e.g. the contrast between a cooking time and a longer period will not be accepted by the programmer).*

#### 10.4 End of cooking

When cooking is over, the oven will automatically switch off and, at the same time, an intermittent alarm will sound. After switching off the alarm, the display will once again show the right time together with the symbol , indicating that the oven has returned to manual operation mode.



### 10.5 Minute Counter

The programmer can also be used as a simple minute counter. By pressing key the display shows ; keep the key pressed and at the same time press keys or . On releasing the key programmed counting will begin and the display will show the current time and the symbol.



*After set-up, to see the remaining time, press the key .*

*Use as a minute counter does not interrupt functioning of the oven at the end of the programmed time.*

### 10.6 Adjusting alarm volume

The acoustic alarm has three different settings. These can be operated, while the alarm is sounding after a minute counter function, by pressing key .

### 10.7 Switching off the alarm

The alarm switches off automatically after seven minutes. They can be manually de-activated by pressing the keys and together. **To switch off the appliance, rotate all the knobs to position 0.**

### 10.8 Cancellation of set data

Once the programme has been set, keep the key of the function to be cancelled pressed, while at the same time is reached by means of variation keys or . Time cancellation will be considered as end-of-cooking time by the programmer.

### 10.9 Changing the set data

The cooking data entered can be changed at any time by keeping the function key pressed and at the same time adjusting the keys or .



## 11. CLEANING AND MAINTENANCE



**Before any intervention, disconnect the power supply of the device**



**Never use a steam jet to clean the appliance.**

### 11.1 Cleaning stainless steel



**To maintain stainless steel in good condition clean it regularly after each use, once it has cooled down.**

### 11.2 Ordinary daily cleaning

To clean and preserve the stainless steel surfaces, always use **only** specific products that do not contain abrasives or chlorine-based acids.

**How to use:** pour the product on a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or deerskin.

### 11.3 Food stains or residues

Do not use metallic sponges or sharp scrapers: they will damage the surface.

Use normal non-abrasive products for steel, and a wooden or plastic tool if necessary.

Rinse thoroughly and dry with a soft cloth or deerskin.

Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven.



 
### 11.4 Cleaning the glazed ceramic hob



**The cooking hob should be regularly cleaned; best after every use, once the residual heat signal lamps have gone off.**

Smudges from aluminium-bottom pans can be easily cleaned off with a cloth dampened in vinegar.

Remove any burnt residues after cooking with the scraper provided; rinse with water and wipe dry with a clean cloth. Regular use of the scraper considerably reduces the need for chemical detergents for the daily cleaning of the hob. Never use abrasive or corrosive detergents (e.g. cleaning powders, oven sprays, spot-removers, wire sponges).

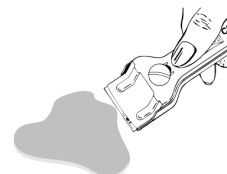




## Instructions for the user

GB-IE

### 11.5 Cleaning of oven

 *For best oven upkeep clean regularly after having allowed to cool. Take out all removable parts.*

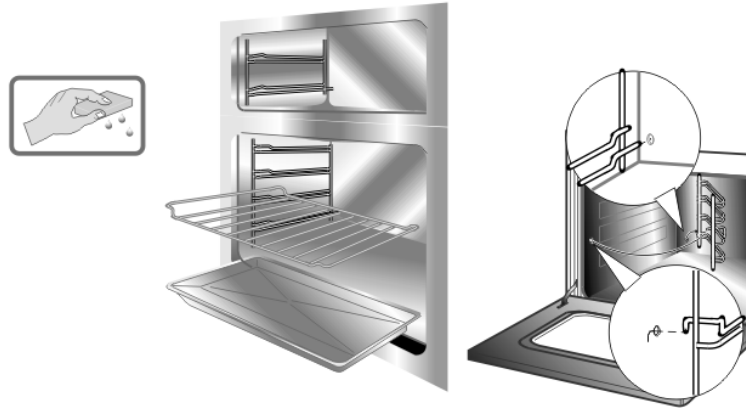

- Clean the oven grill with hot water and non-abrasive detergent. Rinse and dry.
- Clean the internal walls of the oven with a soft ammoniac-soaked cloth. Rinse and dry. If there are still stains or drops, place a damp ammoniac-soaked cloth on the bottom of the oven, close the door and after a few hours wash the oven with hot water and liquid detergent. Rinse and dry.
- Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven.

### 11.6 Door glass

The door glass should always be kept clean. Use absorbent kitchen paper to clean. In case of tough spots, clean with a damp sponge using regular detergent.



*When cleaning, the appliance must be dried thoroughly since detergent and water drips might damage its operation and appearance.*



## 12. EXTRAORDINARY MAINTENANCE

 
The oven may require extraordinary maintenance or replacement of parts subject to wear such as seals, bulbs, and so on. The following instructions describe how to carry out these minor maintenance operations.



*Before any intervention, disconnect the power supply of the device.*

### 12.1 Replacement of light bulb



Remove cover **A** by twisting anticlockwise, replace bulb **B** with another similar bulb (25 W). Refit the cover **A**.

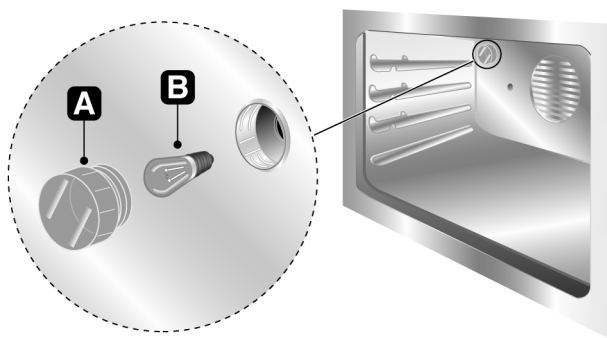

*Only use oven bulbs (T 300°C).*

### 12.2 Removing the door

  Open the door completely and fit the pins (supplied) into the holes from the inside. Close the door to an angle of about 45°, lift it and remove it from its seat. To replace, fit the hinges into the grooves provided, then lower the door until it comes to rest and extract the pins. If the pins are lost, two screwdrivers can also be used.

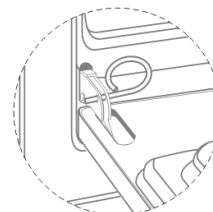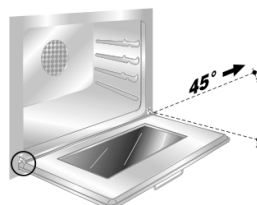

### 12.3 Oven door seal

To permit thorough cleaning of the oven, the seal may be removed. Before removing the seal, take off the door as described above. Once the door has been taken off, lift the tabs at the corners as shown in the figure.

 




## 13. INSTALLATION OF THE APPLIANCE



It is the law that all gas appliances are installed by **competent persons**. This appliance may be installed next to a wall which is higher than the appliance, as shown in the diagram showing the correct installation conditions. Any wall cupboards or shelves must be at a distance of at least **750 mm** above the work surface.

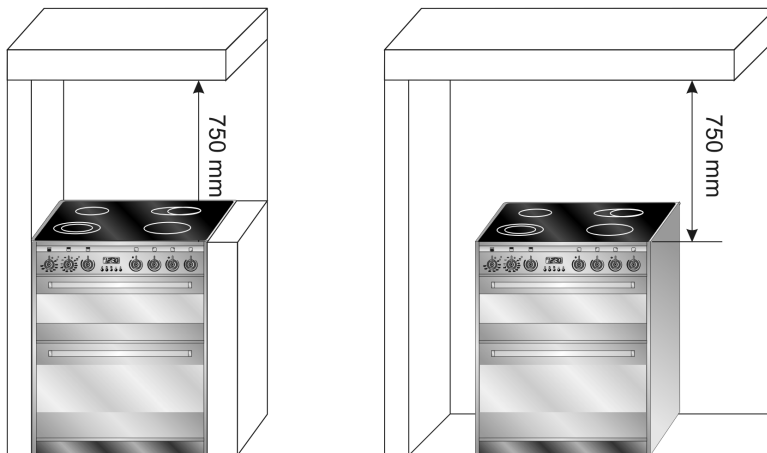

### 13.1 Electrical connection



 
Check that the voltage and dimensioning of the supply line correspond to the characteristics shown on the plate fixed to the rear protective cover of the appliance.

**This plate must never be removed.**



If the appliance is connected to the supply by means of a fixed connection, install a multipolar cut-out device on the line, with contact opening distance equal to or greater than **3 mm**, located near the appliance and in an easily reachable position.

The connection terminals are located at the rear of the appliance. For electrical connections see following diagram. To access, remove the rear cover.

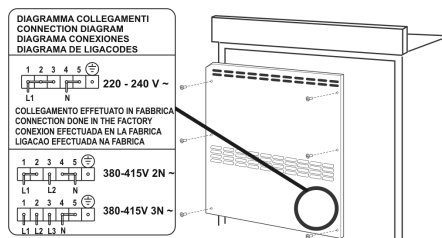


**For operation on 380-415V3N** ~ use an H05RR-F / H05RN-F / H05V2V2-F type five-core cable (5 x 2.5 mm<sup>2</sup>).

**For operation on 380-415V2N** ~ use an H05RR-F / H05RN-F / H05V2V2-F type five-core cable (cavo di 4 x 4 mm<sup>2</sup>).


**For operation on 220-240V** ~ use an H05RR-F / H05RN-F / H05V2V2-F (cavo di 3 x 6 mm<sup>2</sup>).

The cable end to be connected to the appliance must be provided with an ground wire (yellow-green) at least 20 mm longer.

 
**380-415V 3N~** 2.5 mm<sup>2</sup>

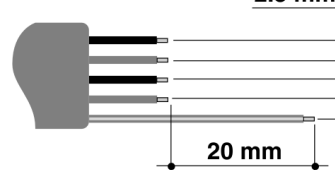


**380-415V 2N~** 4 mm<sup>2</sup>

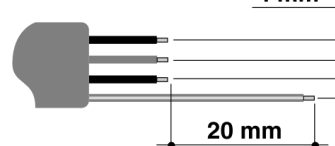 

**220-240V~** 6 mm<sup>2</sup>

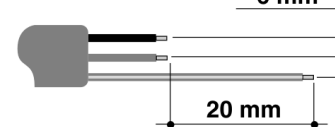 

 


Complete wiring up to power supply with an appropriately rated five-core plug (see data plate) or, in case of operation from a **220-240V** power supply, with a three-core plug. Make sure that plug and wall socket are of the same type and are in conformity with regulations in force. Make sure that the appliance is properly earthed. Before powering, check that the power line is properly earthed. Avoid using adapters or shunters.



**The manufacturer declines all responsibility for damage to persons or things caused by non-observance of the above prescriptions.**
 
### 13.2 Wall fixing

- Stretch out the chain attached to the cooker horizontally so that the other end touches the wall.
- Mark the wall in the position where the hole is to be drilled.
- Drill the hole, insert the finned dowels and attach the chain.
- Move the cooker up against the wall.

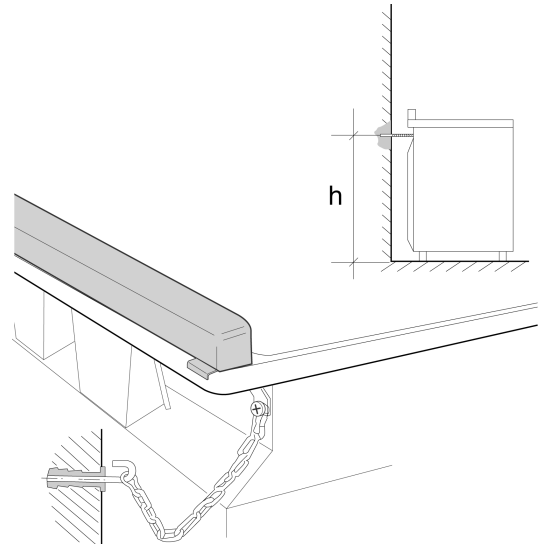

### 13.3 Mounting the rear top skirtboard (where applicable)

- Loosen nuts **B**.
- Position the skirt above the top, taking care to align pins **C** with holes **D**.
- Secure the skirt to the top by tightening screws **A**.

